Assembly Instructions for Ferris Wheel Spinner


WHEEL ASSEMBLY

- 1. Remove end cap and spacer from horizontal bar
- 2. Use the spacer between the wheels as shown in picture.
- 3. Replace the end cap.

 Note: for use in high winds we recommend applying epoxy glue in the end cap.



FERRIS WHEEL CAR ASSEMBLY

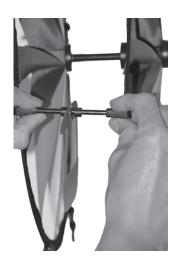

- 4. Pull off the loose pressure washers from the horizontal Ferris Wheel Car rods, slide on Ferris Wheel Cars and replace pressure washers.
- Insert horizontal Ferris Wheel Car rod into the connector on front wheel. Use a slight side to side motion to help slide the rod into the connector.
- 6. Put together fiberglass pole and insert into ground stake.



