

DISNEY WINDSICAL™ ASSEMBLY INSTRUCTIONS

- Assemble Pole as shown on right.
- Insert Cap into Spring Arm, then into Top Pole.
- Insert Top Pole into Bottom Pole.
- Wrap Hands around Top Pole and attach with Velcro.

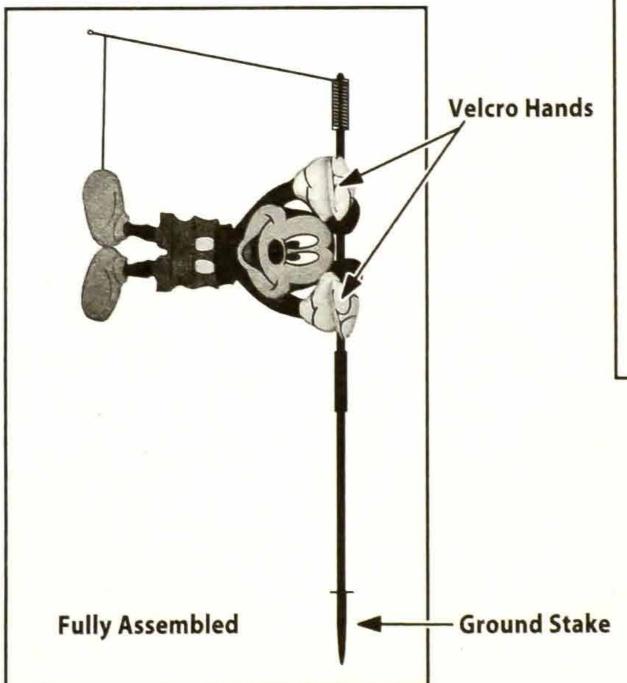

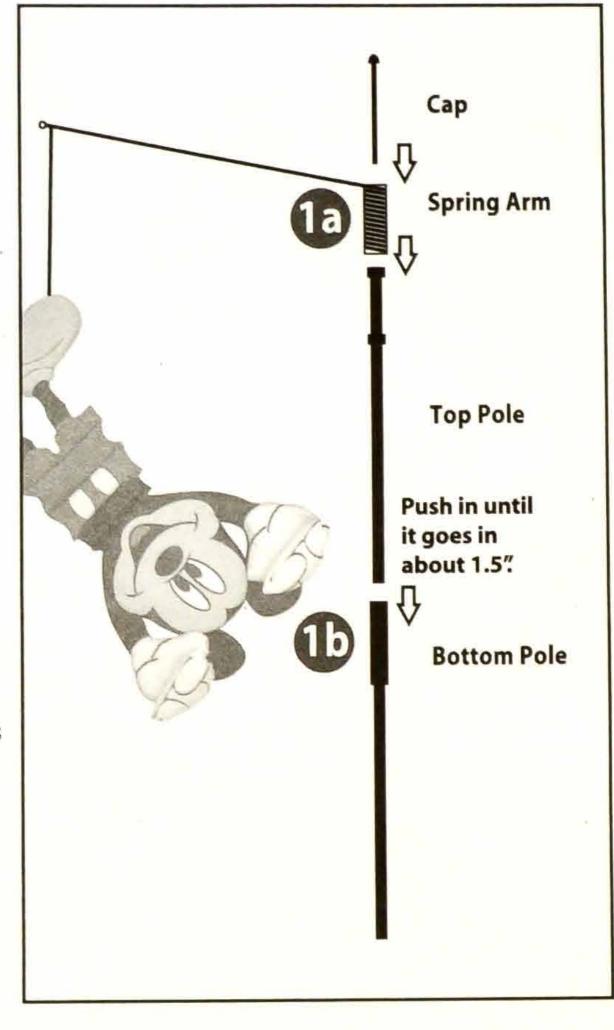

Insert Ground Stake into lawn or garden. Then insert assembled Pole and WindSical™ into Ground Stake.

IN STRONG WINDS PUT AWAY YOUR WINDSICAL™.

Display Option: Mounting to fence or railing, use hose clamp. (Not included.)

